

# SAILOR® 500/250 FLEETBROADBAND

## QUICK GUIDE

### Make a voice call

To make a call from your SAILOR FleetBroadband terminal, dial

**00 <country code> <phone number>** followed by # or off-hook key.

Example:

Thrane & Thrane A/S in Denmark:

**00 45 39558800 #**

NOTE: There are two audio qualities for voice: Standard voice and 3.1 kHz Audio. The default audio quality is Standard.

To force the call to use Standard voice, dial **1 \*** before the number.

To force the call to use 3.1 kHz Audio, dial **2 \*** before the number.

To make a call to the terminal, dial

**+870 <mobile number>**

NOTE: There are two mobile numbers for voice, one for 3.1 kHz Audio and one for Standard voice.

### Send a fax

To send a fax from the terminal, dial

**00 <country code> <phone number> #**

Example:


Thrane & Thrane A/S in Denmark:

**00 45 39558888 #**

NOTE: For an analog fax, the audio quality must be set to 3.1 kHz Audio. For a G.4 ISDN fax, the audio quality must be set to UDI. Note that only SAILOR 500 FleetBroadband supports UDI.

To force 3.1 kHz Audio, dial **2 \*** before the number.

To force UDI, dial **3 \*** before the number.

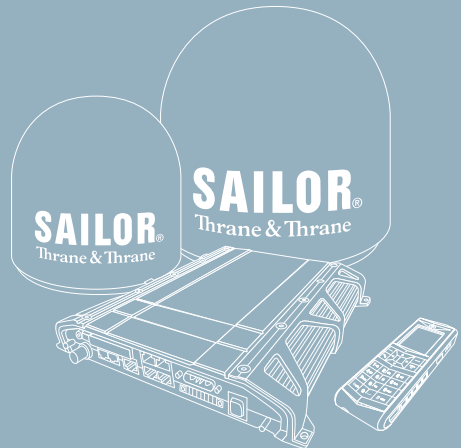

To send a fax to the terminal, dial

**+870 <3.1 kHz Audio mobile number>**

Alternatively you can send a fax directly from you PC using an electronic fax application.

### Make a local call

You can make local calls between phones connected to the same terminal.

To make a local call to a IP handset, dial the number of the IP handset (e.g. **0501**) followed by # or off-hook key.

To make a local call to an ISDN phone, dial **0401** followed by # or off-hook key.

To make a local call to a standard phone, dial **0301** or **0302** followed by # or off-hook key.

For information on allocation of local numbers, refer to the User Manual.

# Thrane & Thrane

## **Access the Internet**

To access the Internet, do as follows:

1. Connect the LAN cable between your computer and the LAN connector in the ship.
2. Start up your computer.
3. Open your browser or email program.

For further information on the terminal, see the SAILOR 500/250 FleetBroadband user manual.

For further information on the Thrane & Thrane IP handset, see the IP handset user manual.