Iridium Global PTT



Iridium Global PTT

- Global Push to Talk Voice Service launching in May 2015
- Main features
 - Truly global & secure (AES 256)
 - Low latency (<5s to get channel, <500ms in call
 - Unlimited amount of participants in talkgroups
 - Direct end user management via the Command Center
 - Over the global air provisioning & device control
 - Affordable unlimited airtime plans
 - Interconnectivity with existing PTT via the NI Matrix Iridium PTT
- Hardware
 - 9575 PTT & 9523 PTT core module
 - Docking stations from ASE & Beam
 - NI Matrix
- Beta testing underway












NI Matrix Iridium Global PTT


NI Matrix Iridium Global PTT

- Evolved from the current NI Matrix for MSAT (NI 3005)
- Iridium Global PTT 9523 core module integrated
- To be launched Q2 2015
- Matrix Core offers Interconnectivity with existing PTT networks & tracking
- Matrix Advanced offers customized solutions for interoperability and least cost routing
- Alpha testing in February & Beta testing in March/April

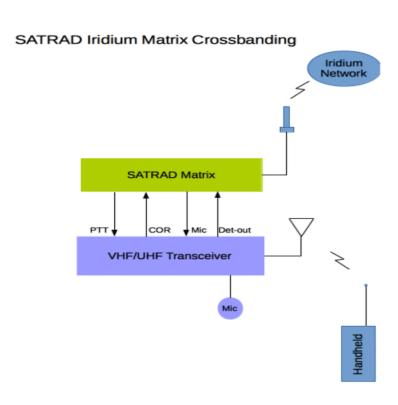



NI Matrix Iridium Global PTT

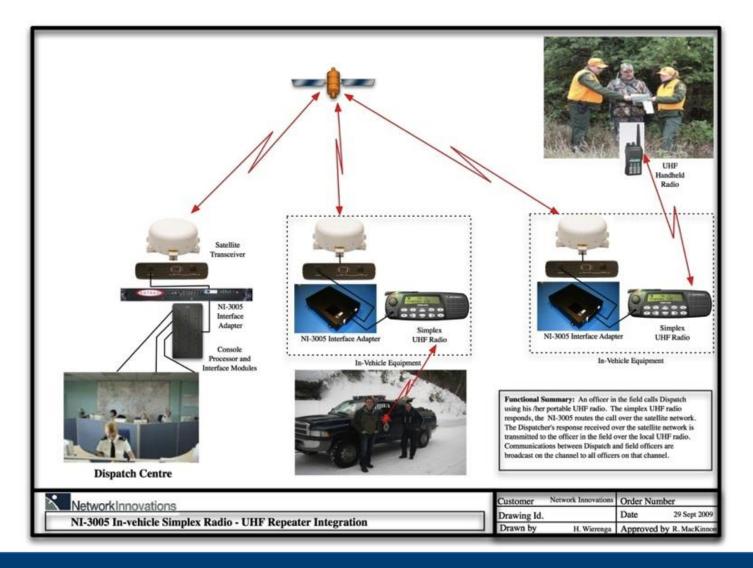



Iridium PTT Talkgroups



Group Communication

Geographic
Reach and
Diversity
Amuuhara an t

- Anywhere on the Earth
- Up to 10 different regions covered per talkgroup

Fast Setup and In-Call Latency

- Button push to talking <5 seconds
- Once in call, sub-500ms

Voice and Data

- Either type of communication is supported.
- Depends on device implementation

Unlimited Authorized Participants

 May provision an unlimited number of devices into each talkgroup (>10,000 devices)

Secure Comms

AES-256
 encryption is
 used to ensure
 the secure
 provisioning and
 talkgroup
 communication.



How is Coverage Provided to Talkgroups?


Talkgroups have their coverage defined within the PTT Command Center using circles, squares and rectangles.

The coverage is defined on the ground and not defined by the user based on where beams are or where satellites fly. The coverage is area on the earth.

These shapes are covered by channels allocated within one or more beams.


As satellites move North to South or South to North the beams covering the shapes (a.k.a. regions) shift, with leading beams rolling off and trailing beams rolling on.

Additionally, the coverage is provided with many look angles to accommodate many situations including urban canyons, mountainous regions, etc.

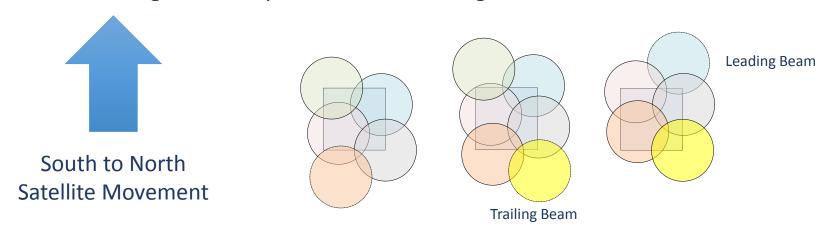



Coverage Example – Arizona, Ontario, DC

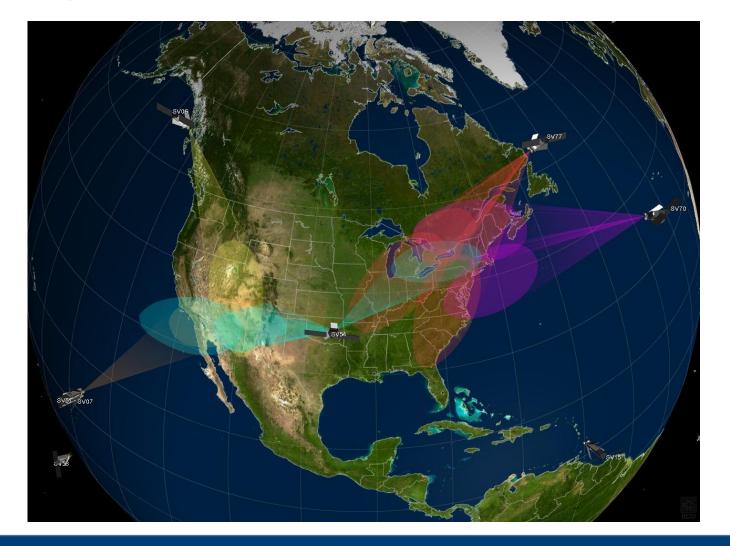



Small Talkgroup: Up to 100,000 km²




One Region




Three Regions



Medium Talkgroup: Up to 300,000 km²

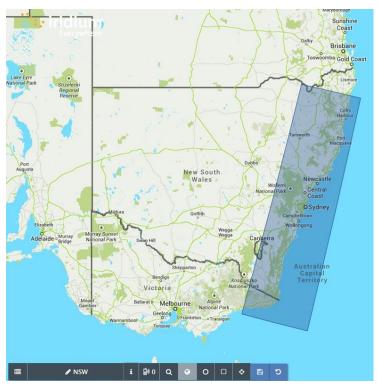


One Region

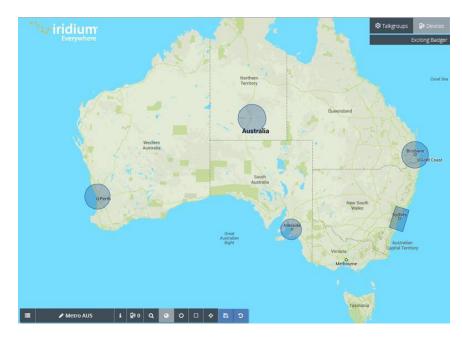

Five Regions



Large Talkgroup: Up to 750,000 km²

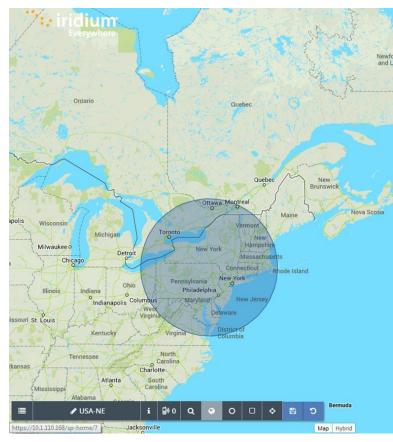

One Region



Ten Regions



Iridium PTT Management



Service Management

Centralized Controls

 All service coordination is performed using a single interface.

Direct Management

End user
 organizations
 may control their
 own service and
 device
 parameters.

Over the Air Provisioning

- Talkgroup areas are changed in seconds.
- Changes to device membership is made available within seconds.

Device Controls


 Devices may be suspended or blacklisted within seconds.


Simple graphical interface

- Google maps utilizes in geo displays
- Easy drag and drop controls.



The Iridium PTT Command Center

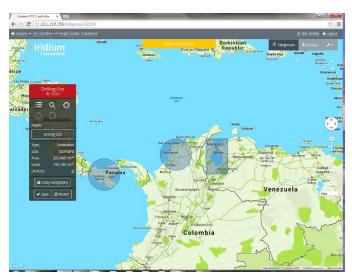

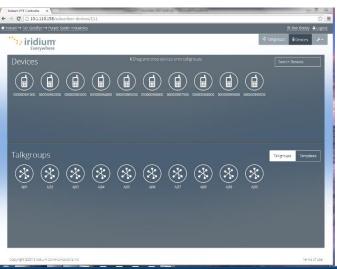

Geographic definition of each talkgroup

- Google Maps interface
- Talk groups are defined by a maximum size of 2.5 M Sq Km
- From one to 10 different geographic areas may be included in a single talkgroup
- Areas are defined on the map by creating circles and rectangles over the area you want to create a group


Subscriber Equipment

- Assign equipment to talk groups through a drag and drop
- Up to 15 talkgroups may be assigned to each Subscriber Equipment

Over the air provisioning to subscriber equipment




Command Center – Talkgroup Summary

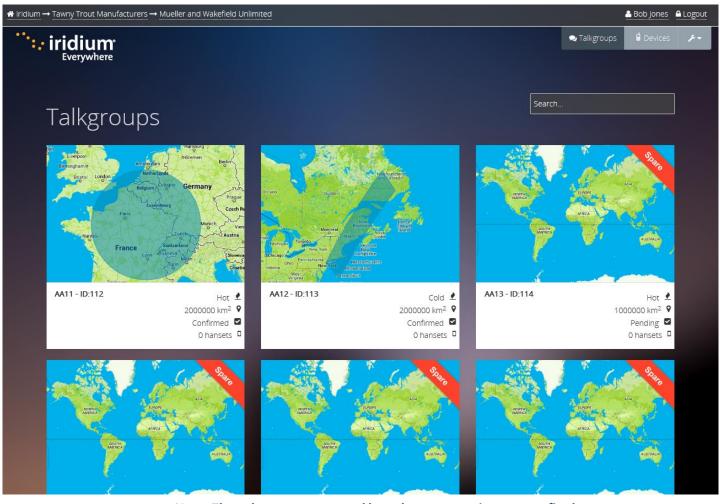

Note: The color treatments and hrand representation are not final




Command Center -- Device/TG Mgmt

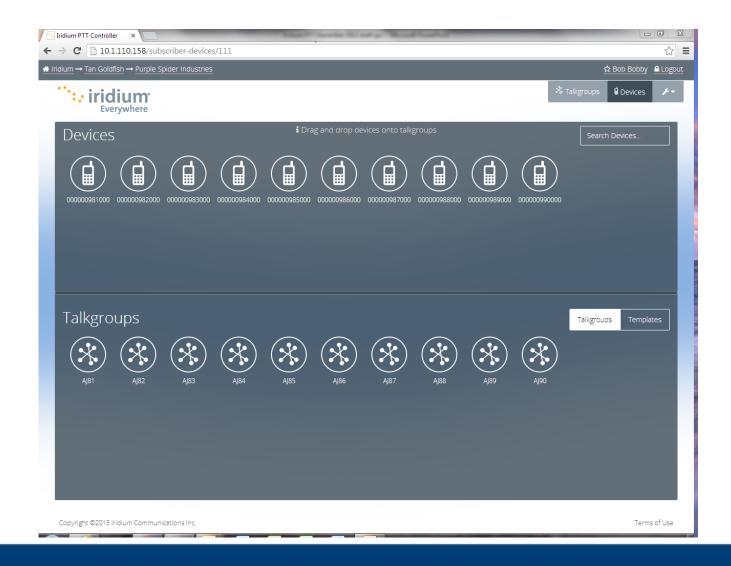



Command Center - Device Detail

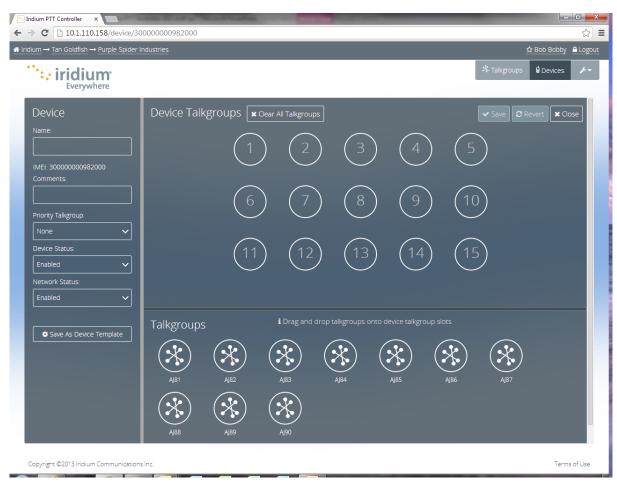

Note: The color treatments and brand representation are not final



Device Features

Talker and Talkgroup name

- Talkgroup and talker names may be assigned.
- Control of names is within the controller.

Talkgroup Membership

• Each device may be a member of up to 15 talkgroups.

Listener Priority Talkgroup

 Each device may be assigned a Priority TG that pre-empts all other traffic when active.

Talkgroup Monitoring

 Each device is informed of activities on all talkgroup to which it is a member.

Global Provisioning

Device
 provisioning
 updates are
 applied anywhere
 on the planet
 regardless of
 talkgroup areas.



Iridium Extreme® PTT

The Iridium Extreme® PTT is a dual-mode device that supports both the current Iridium Extreme® capabilities (Voice, CSD, SMS, SBD, LBS) AND PTT.

It is a new handset that will be sold alongside the Iridium Extreme®.

- The Telephony side of the phone is SIM-based (SBD is the exception) while the PTT side is IMEI based.
- Hardware Enhancements:
 - Faceplate color (black)
 - PTT marking (below screen)
 - improved speaker and PTT button
- Firmware Changes:
 - PTT firmware
 - Switch to Phone/Switch to PTT
 - Reduced set of languages (EN, FR, ES)
 - SOS/Phone operational in Phone Mode only

This device is hardware and radio identical to the Iridium Extreme® and both devices use the same certifications (FCC, IC, etc.).

Due to changes in the deep layers of the phone, it is not possible to reflash Iridium Extreme® (non-PTT) devices.



Dual Mode Device

Services within the device are activated individually and it is possible to operate the device as a Phone Only or PTT Only device.

The phone side is driven by a SIM card and related service subscription.

The PTT side is driven by the device's IMEI.

To switch between the two sides of the device, the user selects the first choice in the menu – "Switch to Phone" or "Switch to PTT."


The transition from Phone to PTT is approximately 10 seconds while the transition from PTT to Phone is about 20 seconds.

When in one side of the device, activity that occurs on the other side will not be known to the device user.

- When in PTT mode, any calls into the Phone will be sent automatically to voicemail.
- When in the Phone mode, any PTT activity will go on without notification to the device user.




9575 PTT Interface Activity Detail

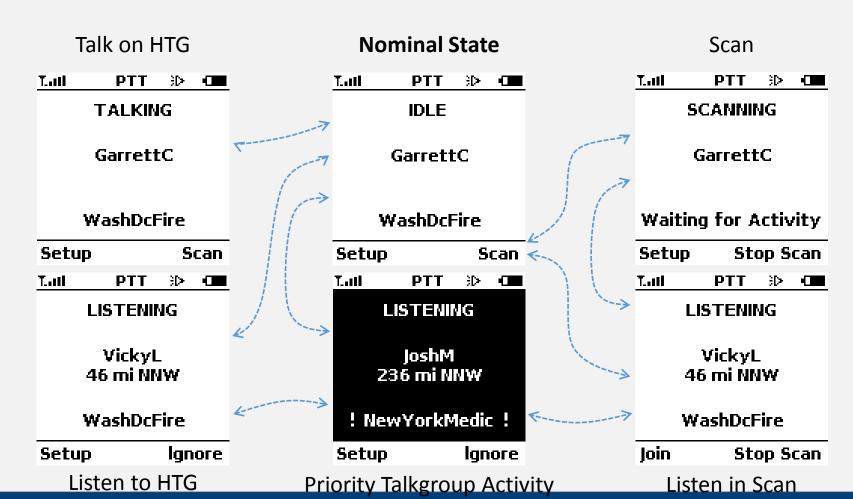



9575 PTT Home Talkgroup Selection

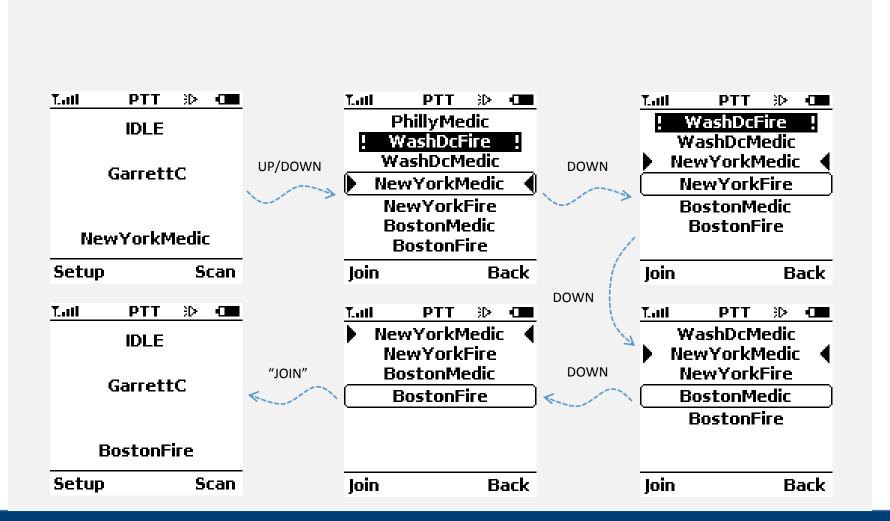



PTT Menu

In the Setup Menu, the user may perform several different types of activities:

- Switch to Phone By selecting this choice and confirming, the device will switch from operating as a PTT device to operation as a Phone.
- Refresh Talkgroups This selection requests that the provisioning information for the device be refreshed, especially the list of talkgroups within which the device is authorized to participate.



PTT Menu (2)

PTT Options

- Talkgroup Timer The PTT service limits each talker to a maximum of 20 seconds of talk time. If desired the device user may enable, through this menu choice, the Floor Grant Timer that displays the time remaining for the current talk period. The choices are Enabled and Disabled and the default is Disabled.
- Location Sharing The choices are Enabled and Disabled with the default being Enabled.
- Scan Period
 — The user may determine how long each active talkgroup is sampled when in Scan Mode. The choices are 5 (factory default), 10 and 15 seconds.
- Distance Format miles, kilometers
- Auto Keypad Lock Enabled, Disabled



PTT Menu (3)

Keypad Tones – DTMF Tones, Single Tone, No Tone

Language – English, French or Spanish

Backlight – Off, 5, 10, 15, 20, 30 seconds

Contrast – Using the up and down navigation buttons you may increase or decrease the screen contrast.

Volumes and Tones – The user is given access to the volume settings and may change them here. The experience is the same as when the up or down volume key (left side of the phone) is depressed.

Auto Keypad Lock – Through this menu choice, the user may change between two modes of operation – Auto Keypad Lock On or Off. When the keypad lock is on, the keypad will lock automatically after the unlocked keypad has not been used for 35 seconds.



Iridium PTT Accesories



PTT Docking Station & PTT Bag Dock



PTT Bag Dock

- Battery powered docking station with external antennas,
 PTT palm mic and car stereo integration
- Charges the 9575 PTT and dock at same time with iridium wall charger or 12v vehicle charger.
- 12 hour use for both dock and handset
- Intelligent circuits monitor the 9575p and bring dock to life when the phone power is detected
- External antennas keep the PTT connection always online
- Car stereo integration enhances sound







Drive Docks Extreme – PTT Docking Station



Key Features / Benefits

- Holds 9575 handset securely
- Full Duplex Hands-free Communications
- Inbuilt Bluetooth*
- Charges 9575 handset ready for use
- Integrated antenna connectors
- Supports external GPS antenna connection*
- Mute button*
- Loud ring indication

Location Based Services / SOS*

- Inbuilt GPS Antenna Coupling to support External GPS Antenna
- Supports 9575 Extreme Tracking / SOS
- Manual Track Position on Dock
- Supports External Alert I/O input

Privacy Handset

Supports optional Beam Privacy handset and other PTT











Hands Free



DATA*



Bluetooth*



GPS*



TRACK*



SOS*

* Items supported in NON PTT Mode Only

PTT corded & cordless solutions











